


DEVICE INSTALLATION SCHEDULE		
INSTALLATION	BACKSET	MIN. STILE
TWO VERTICAL ROD DEVICES	2 1/2"	3 5/8"

NOTES:

- BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED.
- MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.
- FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE TRIM TEMPLATE.
- GLASS BEAD KIT AVAILABLE WHEN REQUIRED.
- THE FIRE LATCH PREP IS FOR FIRE DOORS ONLY.

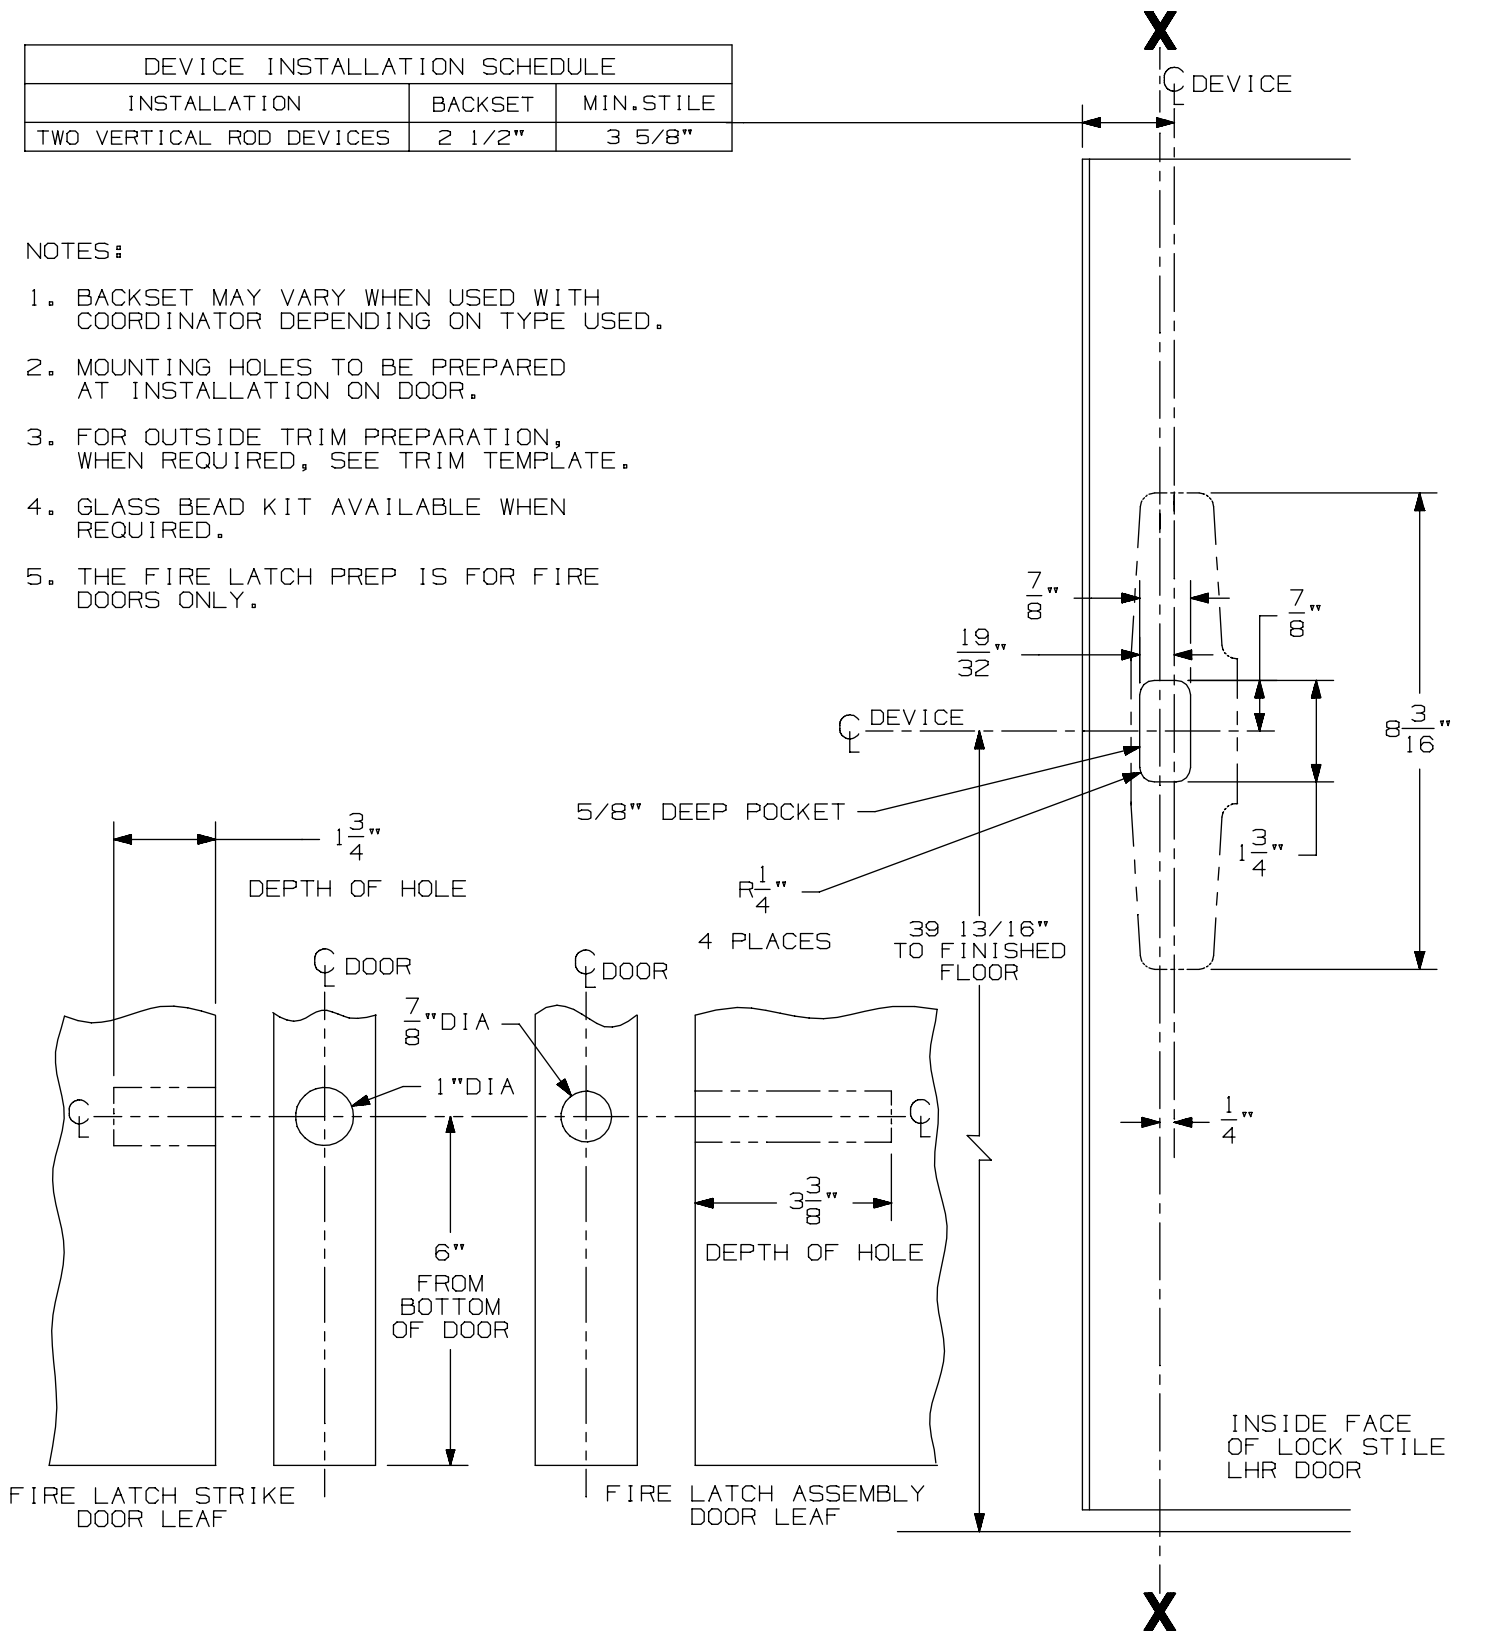

LHR SHOWN
RHR OPPOSITE

33/3527A-F-LBR Series
Vertical Rod Device (Wood Door)

VON DUPRIN

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER:

W10050_a

DATE: 05-29-13