


DEVICE APPLICATION SCHEDULE		
INSTALLATION	MIN. STILE	BACKSET
TWO VERT. ROD DEVICES	3 11/16"	2 3/16" *
VERT. ROD & MORTISE DEVICE	SEE TEMP. W10305	2 3/4"
SINGLE DOOR	3 11/16"	2 3/16"

NOTES:

- \*BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED. USE 2 3/4" BACKSET FOR WOOD FIRE DOORS.
- REMOVE GLASS STOP OR BEAD IN AREA OF DEVICE IF REQUIRED UNLESS GBK IS USED.
- MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.
- FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE ADDITIONAL TRIM TEMPLATE.

5/8" DIA. THRU TO CYLINDER CUTOUT  
 OMIT FOR 98/9927EO AND 98/9927EO-F EXIT ONLY DEVICES

LHR APPLICATION SHOWN,  
 RHR APPLICATION OPPOSITE

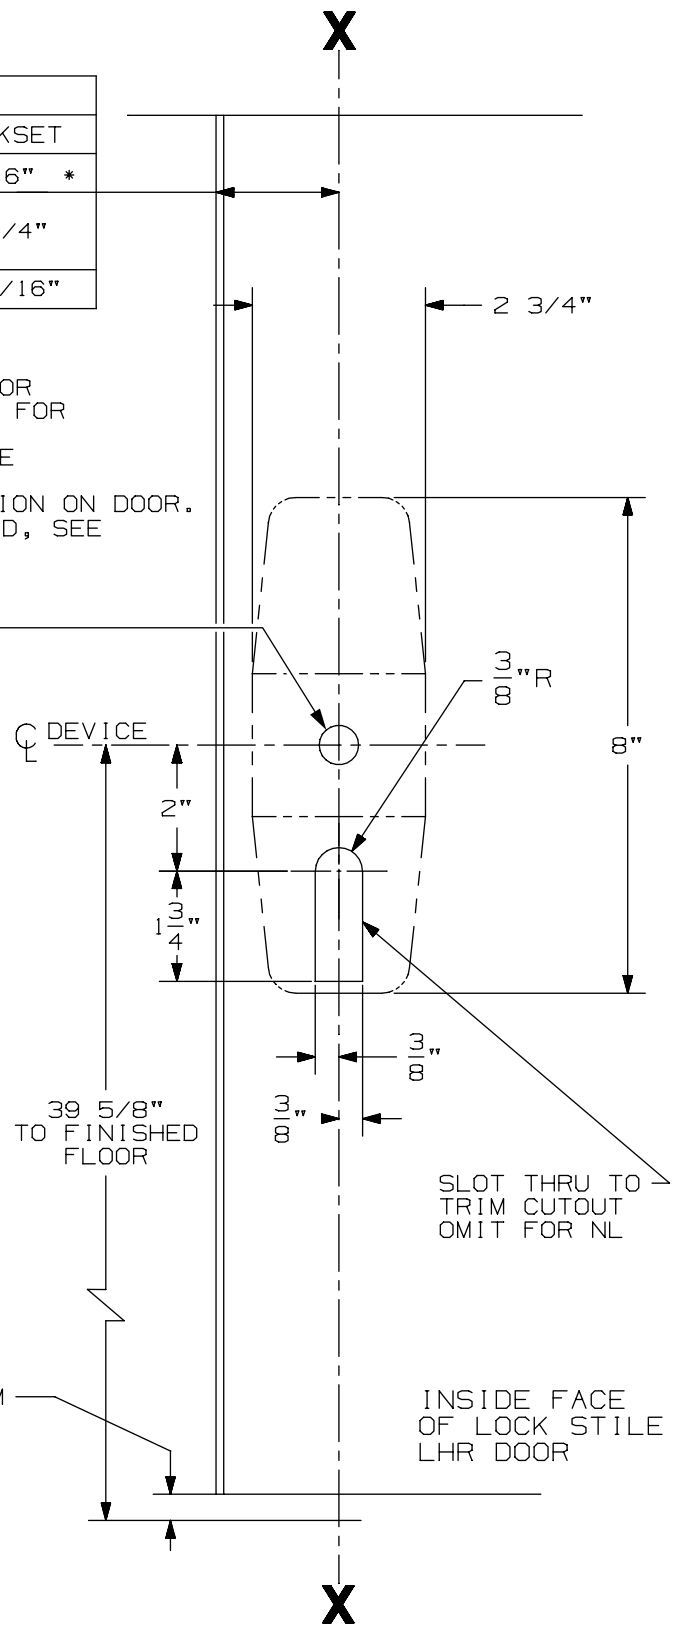

⑥ RECOMMENDED DOOR UNDERCUT IS 1/4" FROM FINISHED FLOOR (PANIC & FIRE) OR 1/8" FROM THRESHOLD (PANIC ONLY).

9827/9927 & 9827-F/9927-F NL, TP, K, & L  
 Series Vertical Rod Device (Wood Door)

**VON DUPRIN®**

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER:

W10304\_b

DATE:  
 10-2-14