


"C" DIMENSION FORMULA	
	"A" (STOP TO STOP DIM.)
-	"B" (SEE DEVICE TEMPLATE FOR BACKSET)
=	
-	SUBTRACT 30 1/2" FOR DOOR FROM 2'6" THRU 3'0" SUBTRACT 42 1/2" FOR DOOR FROM 3'0" THRU 4'0"
=	"C" DIM. (ENTER CALCULATED DIMENSION BUT NOT LESS THAN 1 11/32")

LHR SHOWN
RHR OPPOSITE

NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

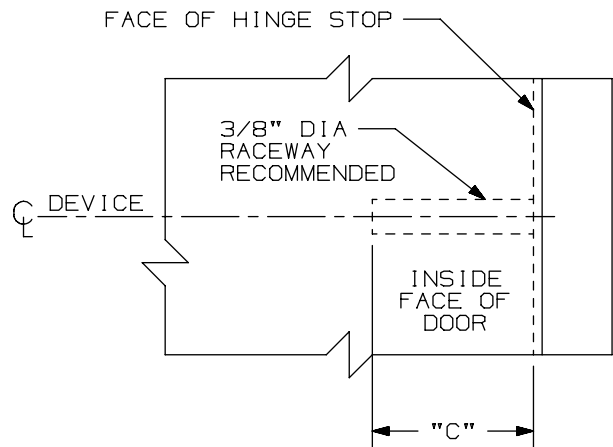

EL, SS, CX98/99 Series Rim Device Single Door Hinge Stile Preparation (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER:

W40084_a

DATE: 05-29-13