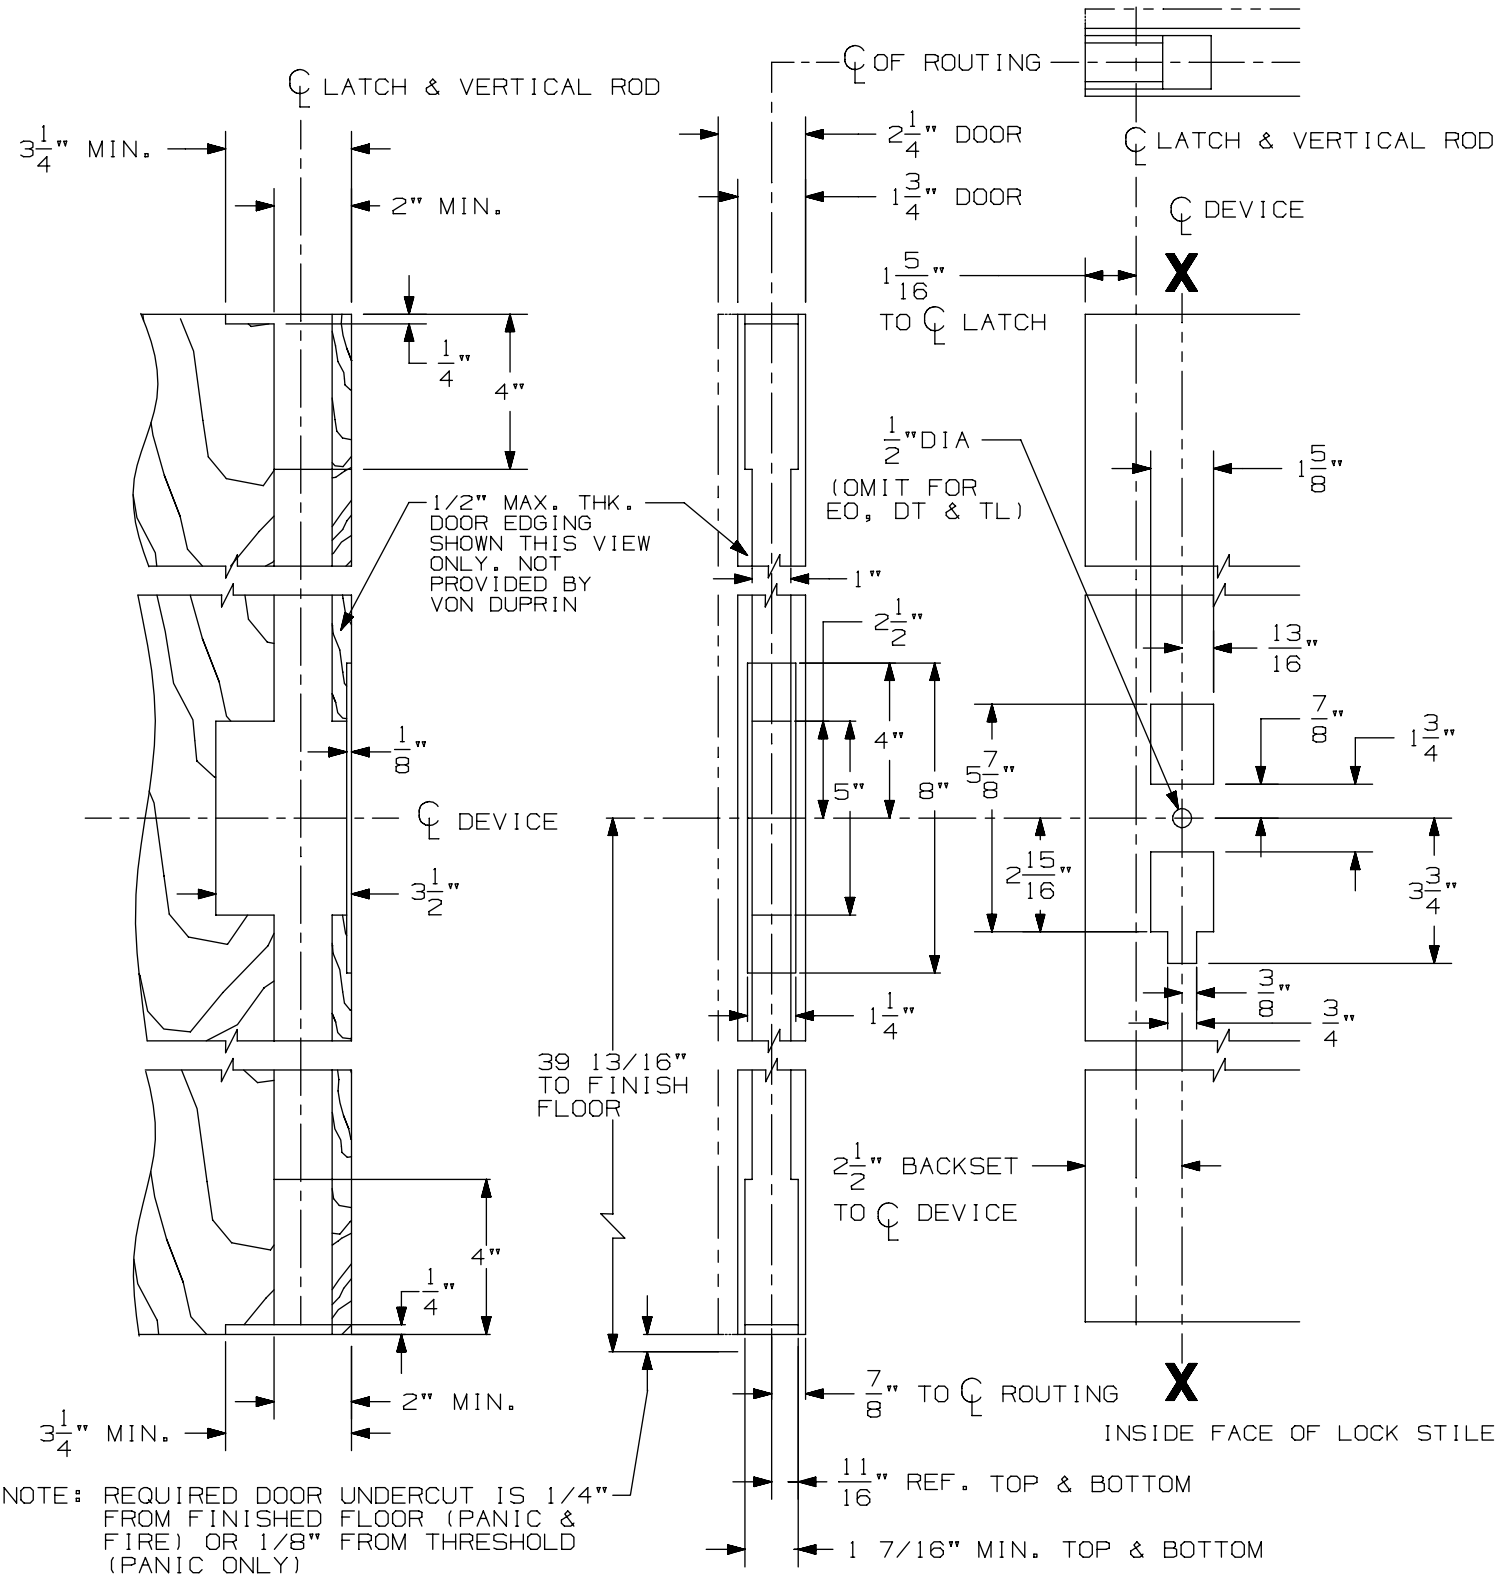

NOTE: REQUIRED DOOR UNDERCUT IS 1/4" FROM FINISHED FLOOR (PANIC & FIRE) OR 1/8" FROM THRESHOLD (PANIC ONLY)

LHR APPLICATION SHOWN, RHR APPLICATION OPPOSITE

NOTES:

1. MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.
2. TRIM OR CONTROL APPLICATION MAY REQUIRE ADDITIONAL PREPARATION, SEE TRIM OR CONTROL DIRECTION SHEET.

STD & CX98/9947WDC Series Device (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER: W10054_a

DATE: 05-29-13